


HOME DECORATORS

collection

BF-24666 MSL DEEP CUBBIE 13"Hx21"W







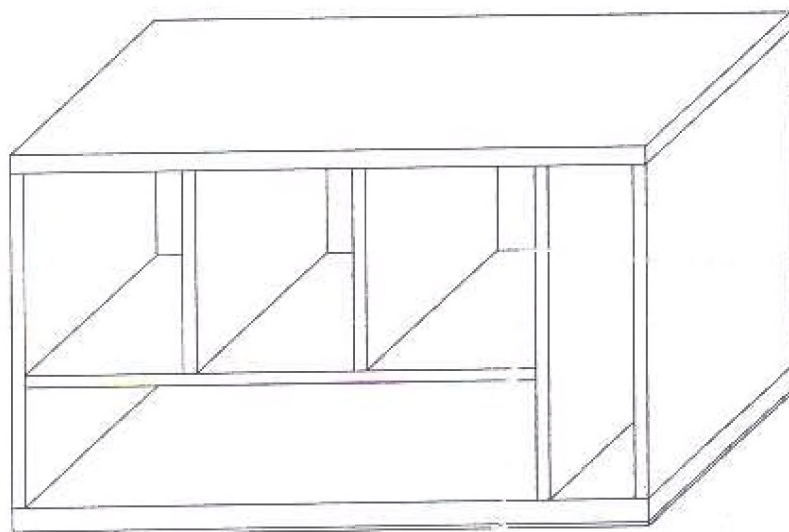





ASSEMBLY INSTRUCTIONS

Made In China



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware. Compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<div>A</div> <div></div> <div>TOP PANEL-1PC</div>	<div>B</div> <div></div> <div>LEFT SIDE PANEL-1PC</div>	<div>C</div> <div></div> <div>RIGHT SIDE PANEL-1PC</div>
<div>D</div> <div></div> <div>BOTTOM PANEL-1PC</div>	<div>E</div> <div></div> <div>BIG STAND PANEL-1PC</div>	<div>F</div> <div></div> <div>SMALL STAND PANEL-2PCS</div>
<div>G</div> <div></div> <div>ACROSS PANEL-1PC</div>	<div>H</div> <div></div> <div>BACK PANEL-1PC</div>	<div>I</div> <div></div> <div>CAM-TOOL-1PC</div>
<div>J</div> <div></div> <div>CAM-BOLTS-6PCS</div>	<div>K</div> <div></div> <div>CAM-LOCKS-6PCS</div>	<div>L</div> <div></div> <div>SCREWS-16 PCS</div>

M



DOWEL-18PCS



N



CAM-LOCKS CAP-6PCS




NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

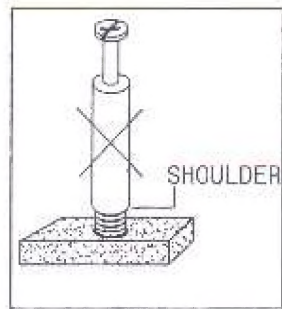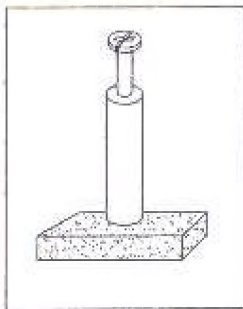


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

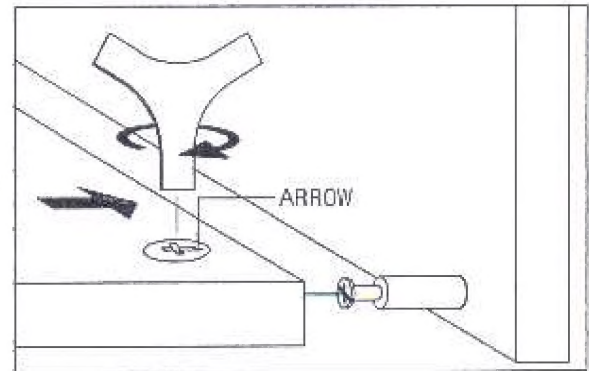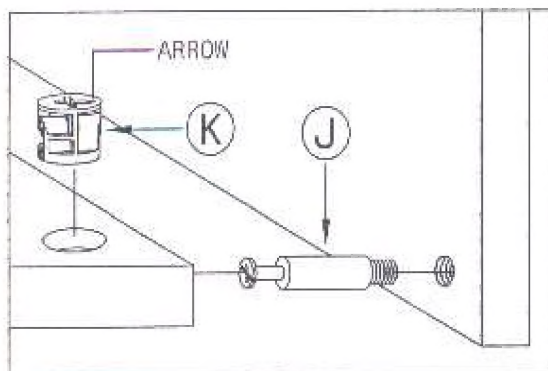


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

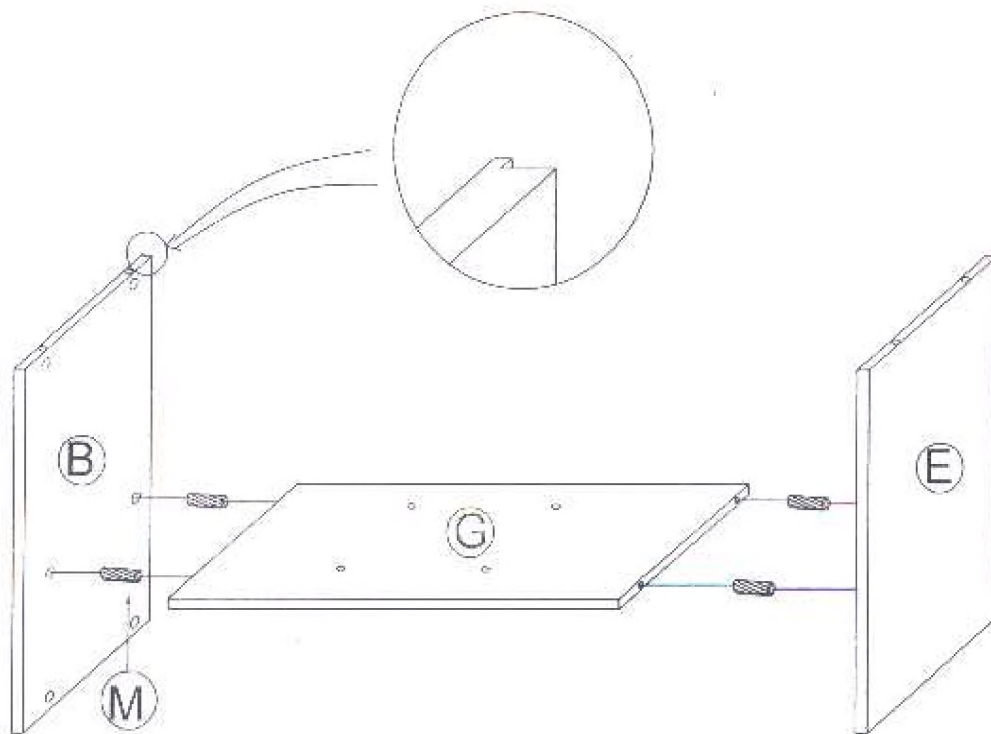


1) . ASSEMBLE THE LEFT SIDE/BIG STAND PANEL(B/E) .

- INSERT THE 4 DOWELS(M) INTO HOLES IN LEFT SIDE/ACROSS AND BIG STAND PANEL(B/G/E) .

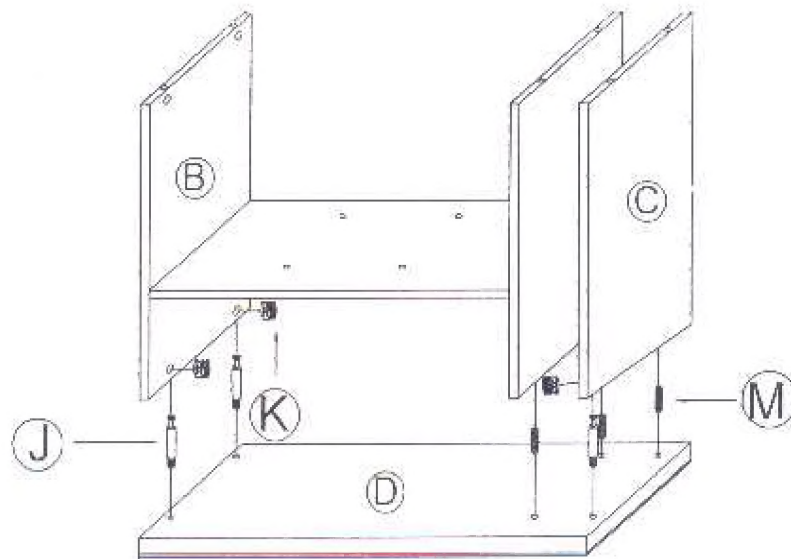


2) . ASSEMBLE THE BOTTOM PANEL(D) .

- ROTATE THE 3 CAM-BOLTS(J) AND INSERT THE 3 DOWELS(M) INTO HOLES IN BOTTOM PANEL(D) .
- PLACE THE CAM-BOLTS(J) INTO HOLES IN PANEL (B/C) AND ATTACH USING 3 CAM-LOCKS(K) .

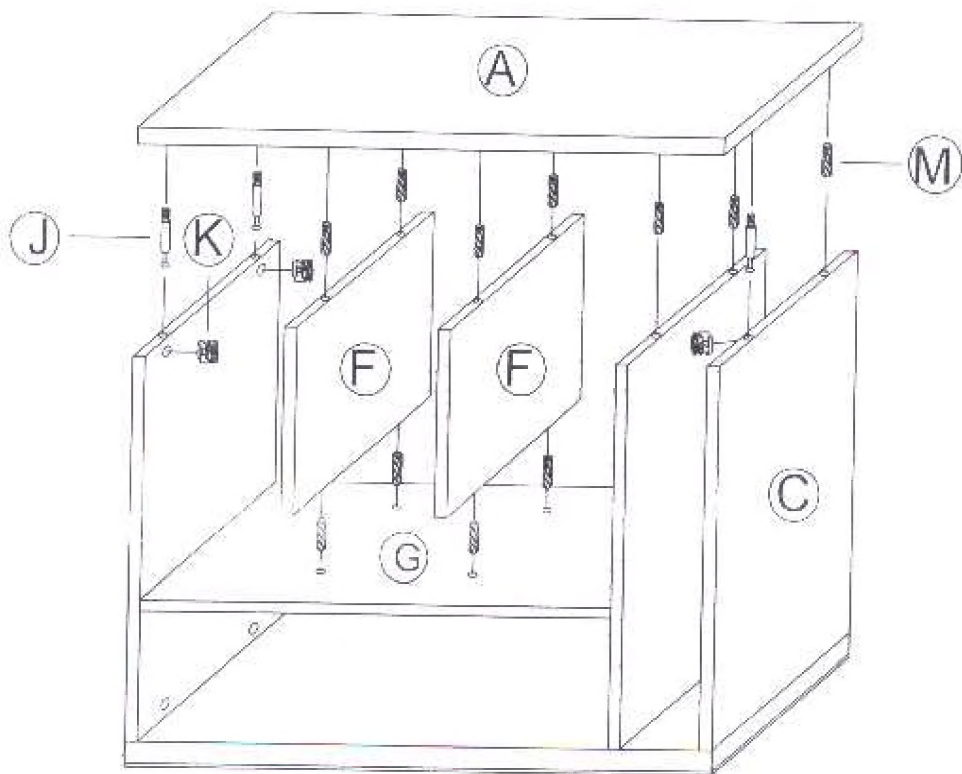


3) . ASSEMBLE THE TOP PANEL (A) .

- ROTATE THE 3 CAM-BOLTS(J) AND INSERT THE 11 DOWELS(M) INTO HOLES IN TOP AND ACROSS PANEL(A/G) .
- PLACE THE CAM-BOLTS(J) INTO HOLES IN PANEL(B/C) AND ATTACH USING 3 CAM-LOCKS(L) .

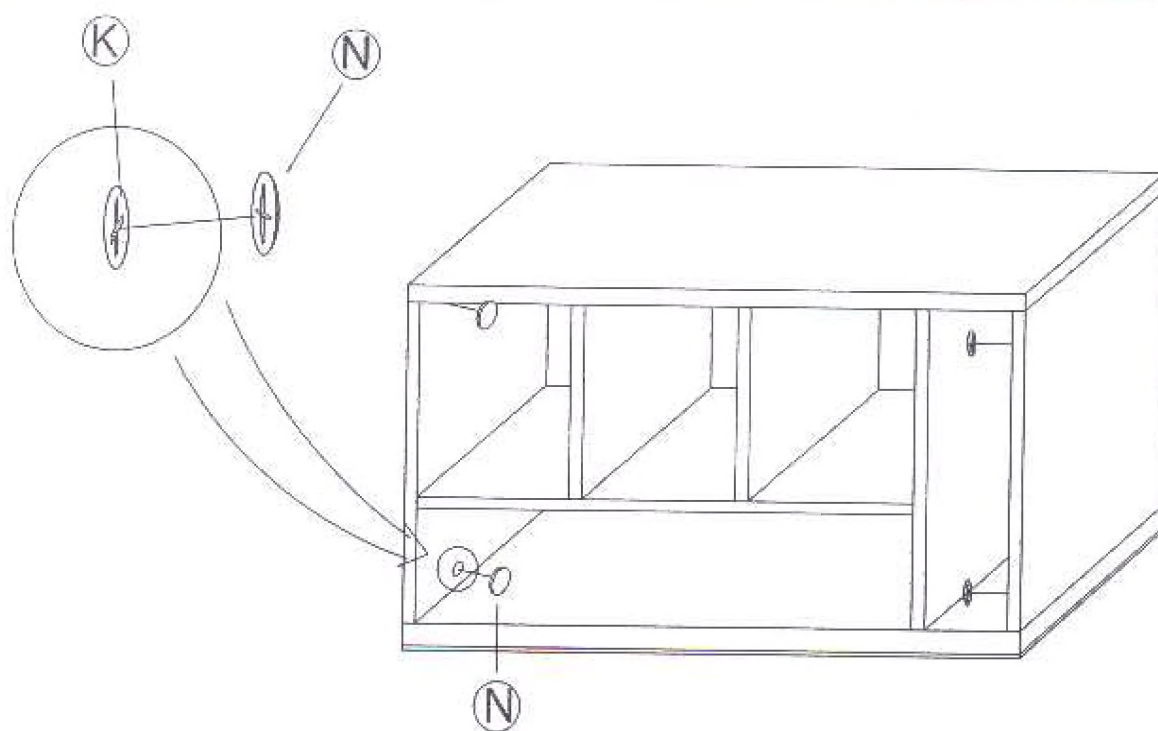

4) . ASSEMBLE CAM-LOCKS CAP(N)

- ATTACH THE 6 CAM-LOCKS(K) USING 6 CAM-LOCKS CAP(N).

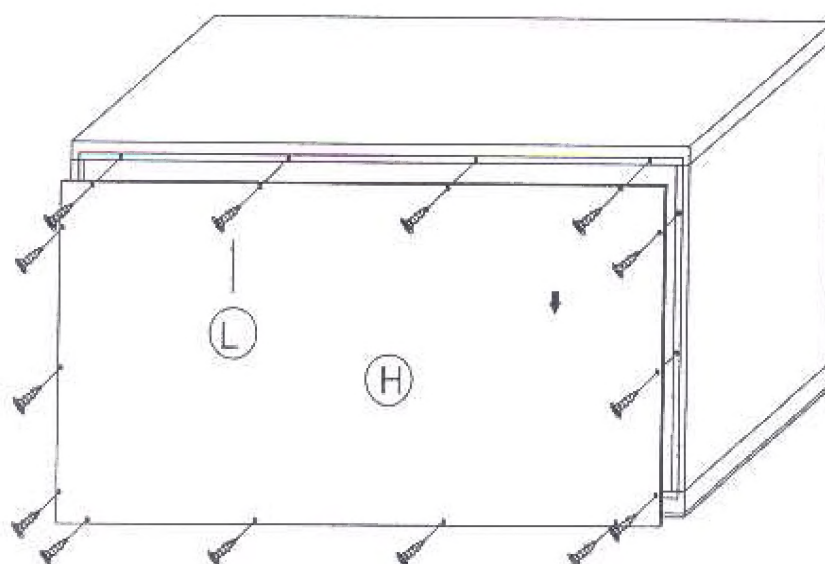

5) . ASSEMBLE BACK PANEL (H)

- ATTACH BACK PANEL (H) USING 16 SCREWS (L).